 


FINGERPRINT CABINET LOCK

USER MANUAL

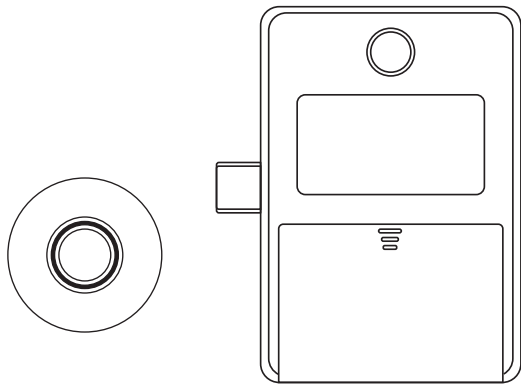 


Feature

- Biometric sensors with high sensitivity
- Fingerprint capacity: 20
- E-key for emergency unlocking and management
- Usage Scenarios: drawer, cabinet, wardrobe etc.

How to add new fingerprints

→Place your (registered) finger on the sensor. Waiting green light to come on for the second time then release your finger.
→ Blue light is on, you can start recording your fingerprints.
→ Repeat placing your finger on the sensor (blue and green lights flash alternately) until the green light stays on for 2 seconds (fingerprint registration is successful).
→The blue light is on again, the next fingerprint can be recorded.(If fingerprint ing is not required, wait for the light to go out)

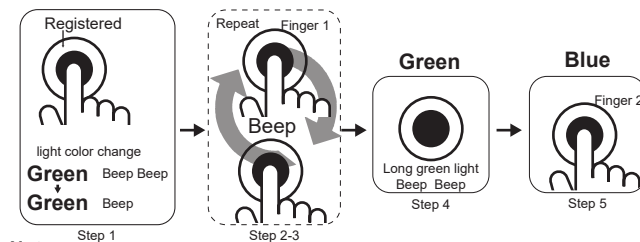

Note

- 1). Make sure add the fingerprint before using. Any finger can unlock in the factory setting
- 2) In order to keep the lock work well, to add no less than 3 fingerprints

How to delete fingerprints

Method 1

→Holding with the registered finger until a red light is illuminated.
→Release your finger.
→Hearing the sound "Beep, Beep", registered fingerprint will be deleted.



Method 2

→Insert E-Key
→Place any fingerprint and wait for the green light to red.
→Hear the sound "Beep, Beep", registered fingerprints will be deleted.



How to change Manual Mode(Register fingerprint is required to lock and unlock)


Method 1

→Holding with the registered finger until a blue light is illuminated.
→Release your finger.
→Hearing the sound "Beep, Beep".
→Manual mode change complete.



Method 2

 →Inserting E-key and holding with any finger until a blue light is illuminated.
→Release your finger.
→Hearing the sound "Beep, Beep".
→Manual mode change complete.

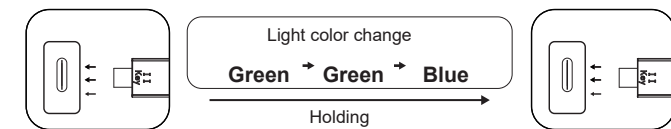

Other Functions

1.E-Key

→ Insert E-Key
→ Put any finger on sensor, green light on then remove, unlocked
→ Pull the door open

 


2. Low battery warning

- Insufficient power: Green and red lights flash frequently when unlocking the door. Please replace the battery in time
- Battery type: 3*AAA alkaline batteries. Prohibit the use of carbon batteries


3. Emergency power

- Can be connected to a power bank or mobile plug for external power supply when the power is low. Replace the battery after unlocking.
- Fingerprint error and low battery occur at the same time, insert the E-key and external emergency.

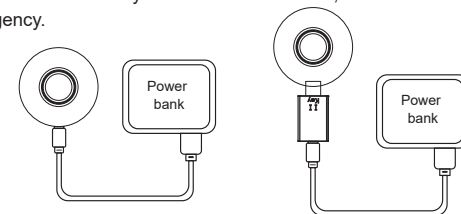


Installation Instructions

 1. Put the installation drawing on the door, approx. 45mm between the door frame and center hole (Picture 1), then drill the hole

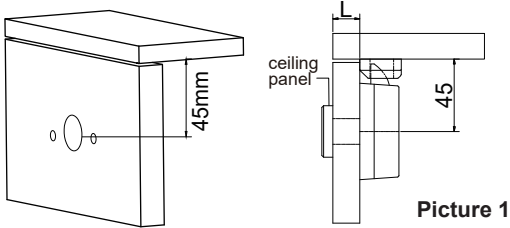

Picture 1

 
wire connection

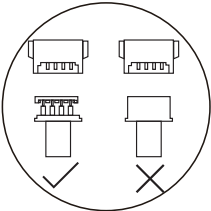

	Door Thickness (mm)	Screw
	13mm~17mm	M4X20
	18mm~22mm	M4X25


2.1)Insert connecting wire(See picture 2) into the front panel,then wire goes through the centre hole;fix up the panel by screw M4*25.

 2.1)Insert connecting wire(See picture 2) into lock body,then fix up by screw ST3.5*18MM.

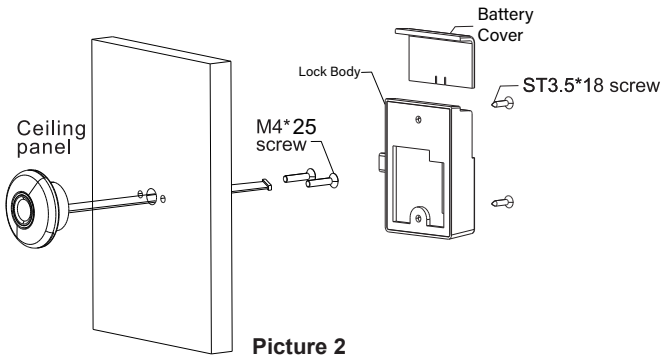


Picture 2

 3. Fix the striking plate by screw ST3.5X18 (Make sure latch works well)

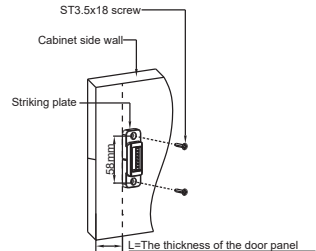


Picture 3

 COMPONENT

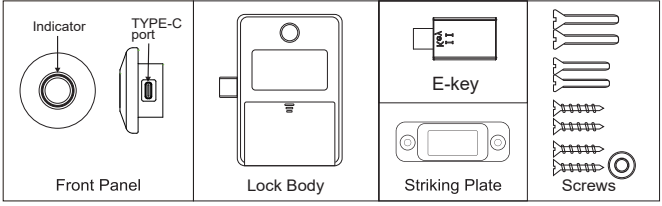

INSTALLATION DRAWING

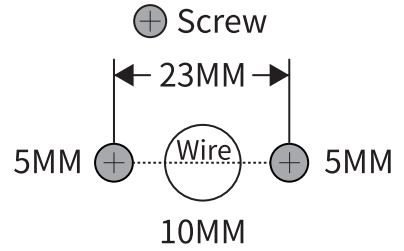 

Follow the drawing to drill the hole