


blue BT6 Soft closing sliding roller


Cabinet Accessories

Accessory	Drawing	2 Doors	3 Doors	Accessory	Drawing	2 Doors	3 Doors
Runner		8	12	Allen key		1	1
Damper		4	4	Track		1	1
ST41 16 screws		32	48	Track		1	1

Size of wardrobe and door

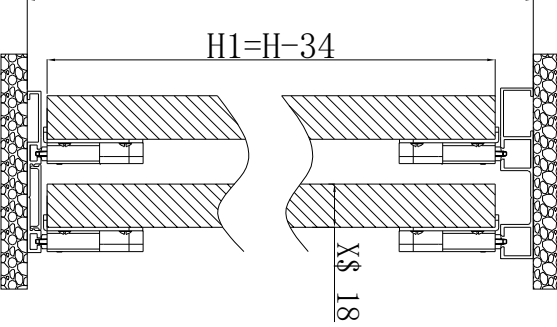

Track length

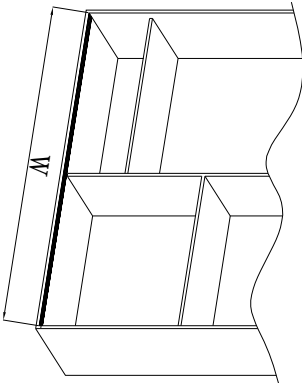


Step 1:




"

*Attention : install damper according to arrow direction


>5mm

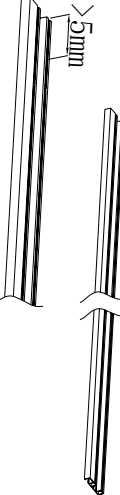


Install end of cap of track

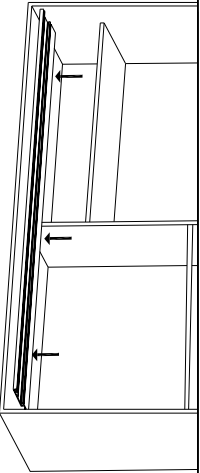

Step 2: install track

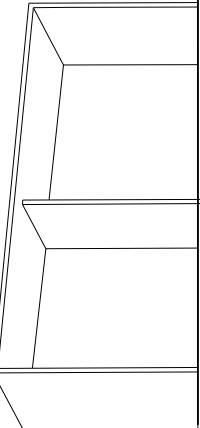

Step 3: fasten upper and bottom track

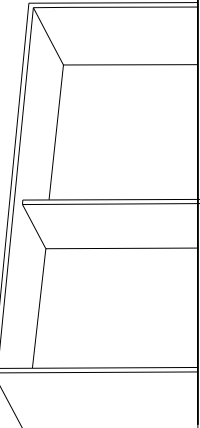


Step 4:


set up damper as picture shows#

Damper original statue

*The damper is placed in the track, the hook must be reset to the middle hook groove before the first push and pull


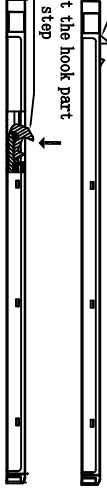


Step 5: install door panel#

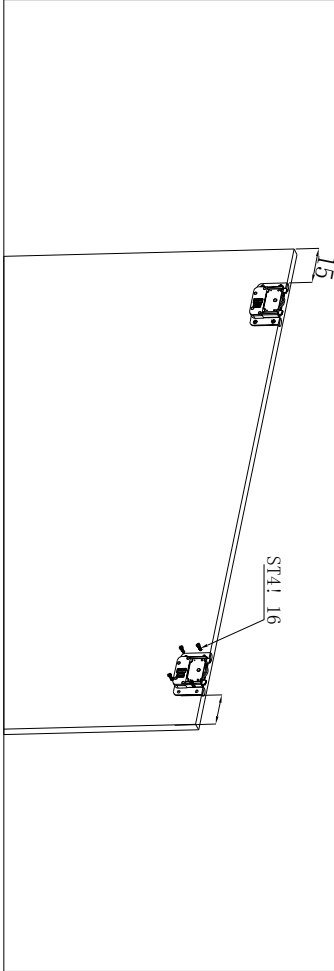


Step 6: install cabinet door #

Step 7: Adjust door gap#

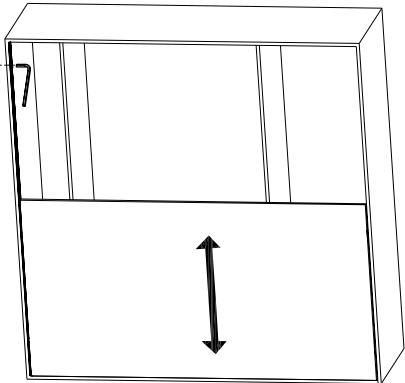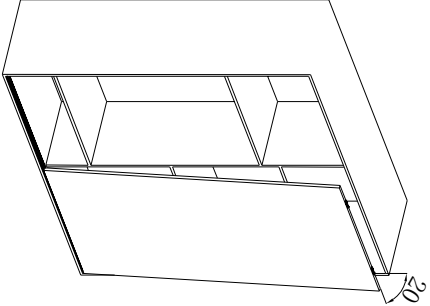

1. Firstly open the roller lock after install door when the roller is locked at the beginning.
2. open bottom roller lock and adjust door panel height (how to adjust: A. lift or pad one side of door panel to the right height and then lock up. B. Push the door to where the panel is lifting to the cabinet side and lock it then)

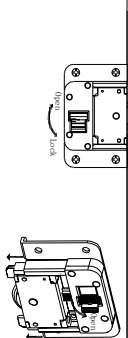

1. Push door from left to right several times to confirm right location of damper .
2. After testing the smooth of the door and its soft closing , lock the damper at its right location with allen key

