



Accessories	Dooring	2 Door	3 Door	Accessories	Dooring	2 Door	3 Door
Runner		8	12	End cap for aluminum rail		8	8
Damper		4	4	Allen Key		1	1
ST4* 16 screw		32	48	Aluminum rail		4	4


Size on wardrobe

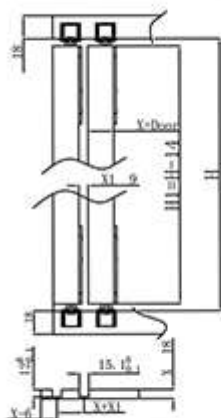


Aluminum rail length

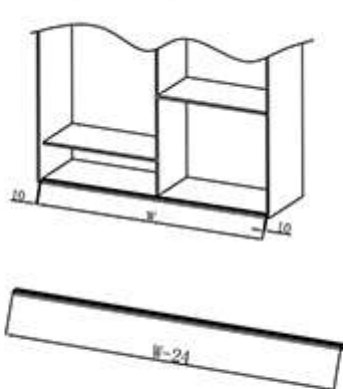


Step1:
Install soft close damper and end cap of aluminum rail

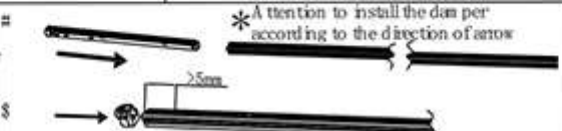

Step2: Install aluminum rail

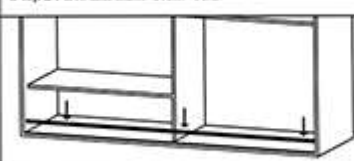


Step3: Fasten upper and bottom rail

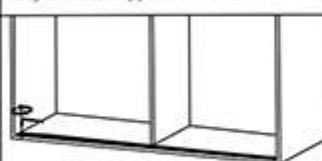


Step 4:


Setup the damper as picture showed

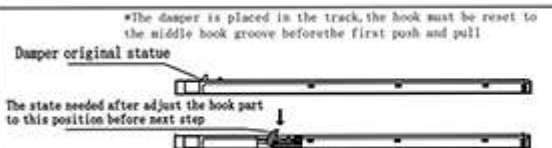

Step 5: Door panel skirting and Runner installation

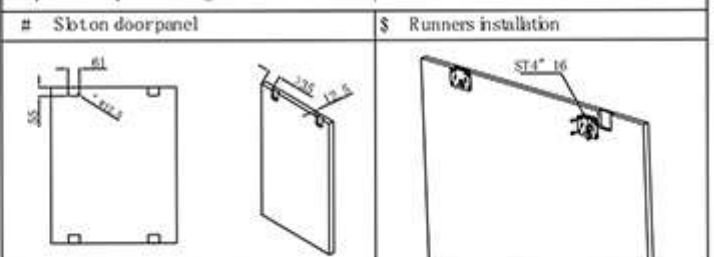

Step6: Door panel installation

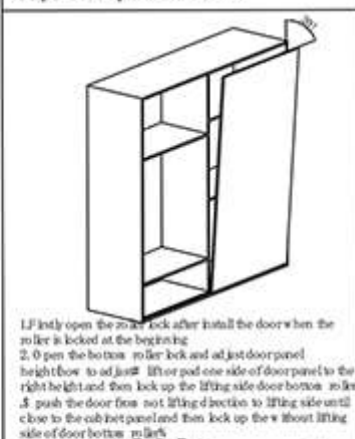

Step7: Door gap regulation

