
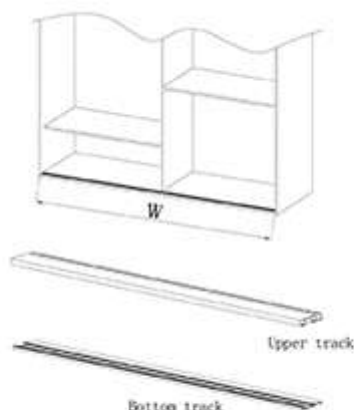


BT6 Soft closing sliding roller

Accessory	Drawing	2 Doors	3 Doors	Accessory	Drawing	2 Doors	3 Doors
Runner		8	12	Allen key		1	1
Damper		4	4	Track		1	1
STH 16 screws		32	48	Track		1	1


Size of wardrobe and door

Track length

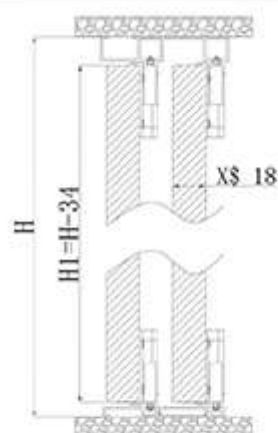


Step 1:


Install end of cap of track

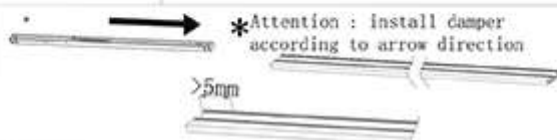

Step 2: install track

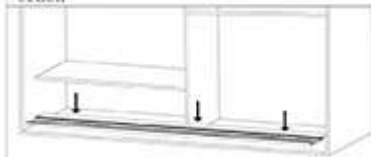


Step 3: fasten upper and bottom track

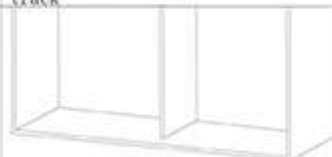


Step 4:

set up damper as picture shows#

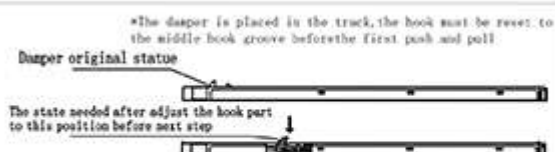

Step 5: install door panel#

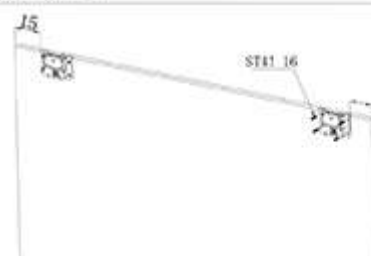


Step 6: install cabinet door #



1. Firstly open the roller lock after install door when the roller is locked at the beginning.
2. open bottom roller lock and adjust door panel height (how to adjust: A. lift or pad one side of door panel to the right height and then lock up. B. Push the door to where the panel is lifting to the cabinet side and lock it then).



Step 7: Adjust door gap#

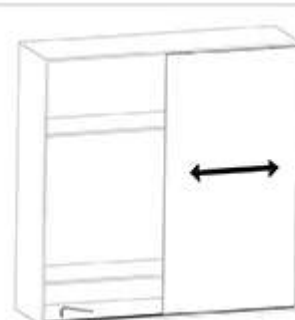

1. Push door from left to right several times to confirm right location of damper.
2. After testing the smooth of the door and its soft closing, lock the damper at its right location with allen key.

